

SPEED SENSOR (U151E/U151F)


REPLACEMENT

1. REMOVE BATTERY
2. REMOVE AIR CLEANER ASSY
3. REMOVE AIR CLEANER HOSE NO.1




4. REMOVE SPEED SENSOR (NT SENSOR)

- (a) Disconnect the speed sensor connector.
- (b) Remove the bolt and speed sensor.

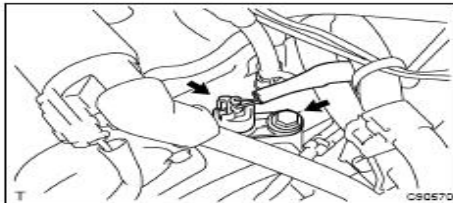

5. REMOVE SPEED SENSOR (NC SENSOR)

- (a) Disconnect the speed sensor connector.
- (b) Remove the bolt and speed sensor.

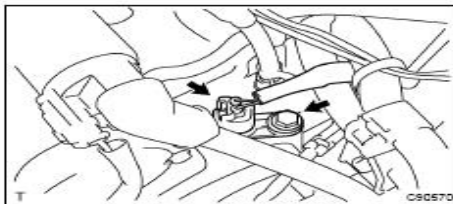

6. INSTALL SPEED SENSOR (NC SENSOR)

- (a) Coat the O-ring with ATF.
- (b) Install the speed sensor with the bolt.
Torque: 11 N·m (115 kgf·cm, 8 ft·lbf)

HINT:

- Make sure of the sensor manufacturer's name.
- (c) Connect the speed sensor connector.



7. INSTALL SPEED SENSOR (NT SENSOR)

- (a) Coat the O-ring with ATF.
- (b) Install the speed sensor with the bolt.
Torque: 11 N·m (115 kgf·cm, 8 ft·lbf)

HINT:

- Make sure of the sensor manufacturer's name.
- (c) Connect the speed sensor connector.