

• USA 75 MHz •

RECEIVER CHANNEL FREQUENCIES

<u>CHANNEL #</u>	<u>FREQUENCY (MHz)</u>
61	75.410
62	75.430
63	75.450
64	75.470
65	75.490
66	75.510
67	75.530
68	75.550
69	75.570
70	75.590
71	75.610
72	75.630
73	75.650
74	75.670
75	75.690
76	75.710
77	75.730
78	75.750
79	75.770
80	75.790
81	75.810
82	75.830
83	75.850
84	75.870
85	75.890
86	75.910
87	75.930
88	75.950
89	75.970
90	75.990

**TRANSMITTER CRYSTAL MUST BE SAME MAKER
AND FREQUENCY BAND AS TRANSMITTER*

• USA 27 MHz •

RECEIVER CHANNEL FREQUENCIES

<u>CHANNEL #</u>	<u>FREQUENCY (MHz)</u>
1	26.995
2	27.045
3	27.095
4	27.145
5	27.195
6	27.255

**TRANSMITTER CRYSTAL MUST BE SAME MAKER
AND FREQUENCY BAND AS TRANSMITTER*