



## Two Ways to Hang an OCFD/Window Antenna

### Electrically Superior Method:

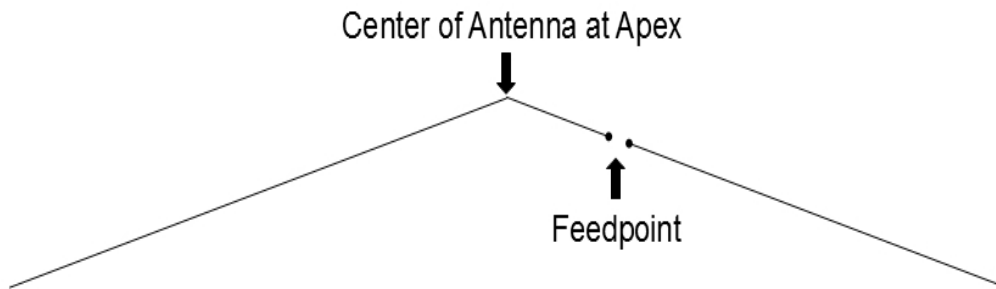

### Mechanically Superior Method:

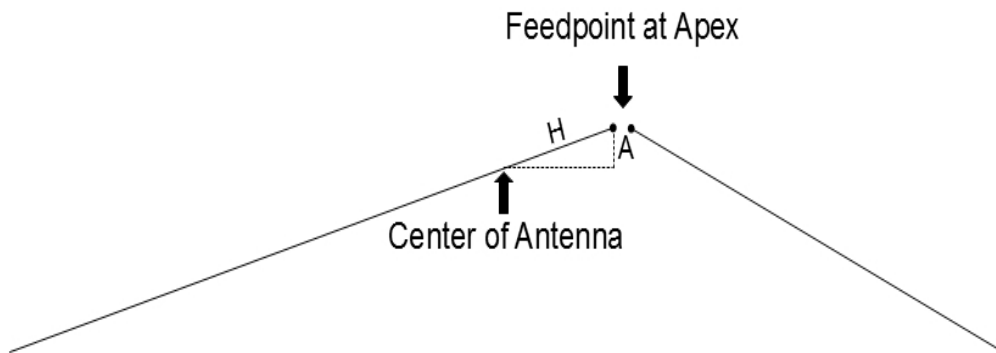

40m example:  $H = 8.5'$   $74^\circ$   $A = \text{cosine}(74^\circ) * 8.5' = 2.3'$

Todd Mitchell, NØIP