



Two Ways to Hang an OCFD/Window Antenna

Electrically Superior Method:

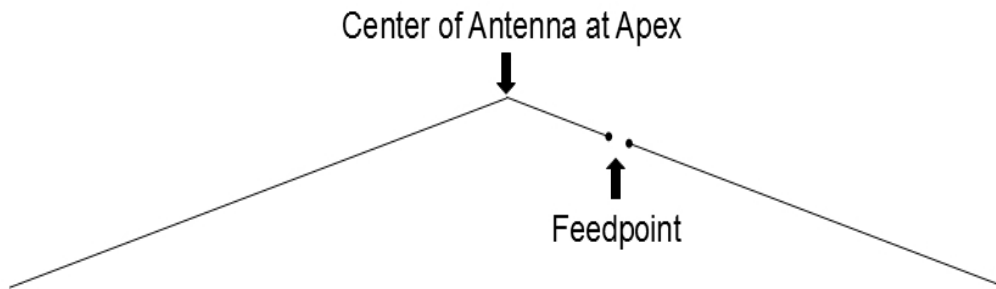

Mechanically Superior Method:

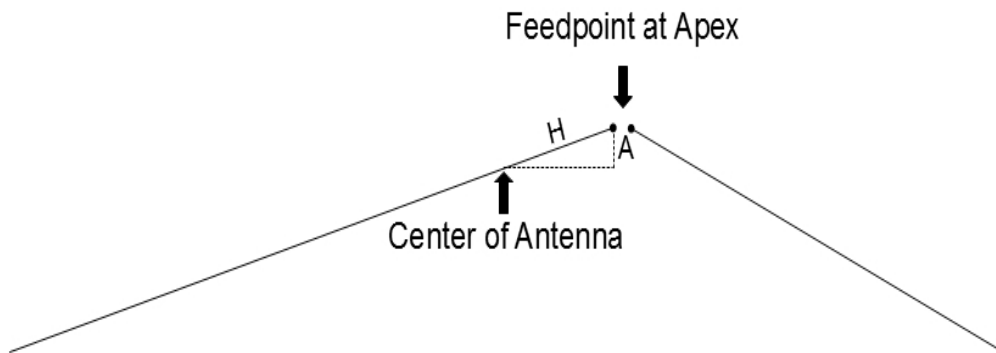

40m example: $H = 8.5'$ 74° $A = \text{cosine}(74^\circ) * 8.5' = 2.3'$

Todd Mitchell, NØIP